

Enabling central control for single zone (RAC) and multi-zone (FJM) high-wall indoor units.


This technical bulletin will explain how to enable central control for RAC and FJM high-wall indoor units using the wireless controller that shipped with the unit. Segment 05 of the basic option settings will be modified to enable central control.

Applicable models:

- RAC systems: AR*****N (excludes Novus models AR**JSALBWKNCV and AR**JSFLBWKNCV) and AQN36VFUAGM
- FJM indoor units: AJ0**JNADCH/AA

1. To enter service mode, remove the batteries and wait for the screen to go blank. While holding the temperature up and down buttons, replace the batteries.
2. Press the FAN DOWN button twice to adjust the segment on the left to "2" as shown in the example below.
3. Press MODE to advance to the next page (noted by "Cool", and "ON").
4. Press the FAN UP button once to adjust the segment on the right to "1" as shown in the example below.
5. Once the numbers shown above are entered into the controller, press the power button several times while pointing remote at the indoor unit.
6. Remove batteries. After the screen goes blank, replace batteries and cover to return to normal operation.

Refer to installation and training manuals for full programming instructions when using a wireless controller.

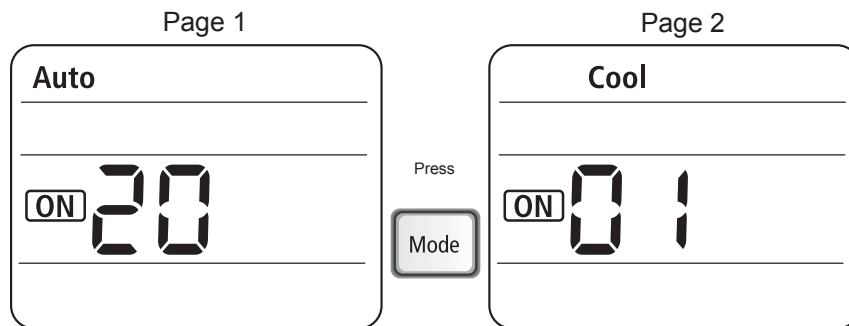

NOTE: This example only shows programming segments 1-4. There are 20 total option setting segments for indoor units that can be modified. Most RAC and FJM high-wall unit installations do not require other option setting modification but if other options were programmed or need to be programmed (ex: external contact control), please contact Samsung HVAC technical support for assistance.