

- While the heat pump system operates in heat mode the louver position is based on the occupant's setting (auto-swing or a fixed position).
- Upon defrost operation initiation, the louver position will automatically adjust to a factory preset position of 25°.
- The louver position is maintained at an angle of 25° while in defrost operation and during cold air prevention stage (compressor on, indoor unit fan off) after defrost has completed.
- As the indoor coil heats up, the indoor fan will begin to operate as normal.
- The louver position will return to prior position if it was within 74°- 120° before the system initiated defrost operation.
- If the louver position was manually moved before defrost initiation, the louver will return to the default angle of 74°.
- Models: AR**HSFSHWKN, AR**HSFSJWKN, AR**JSFDHWKN, AR**KSWDHWKN, AR**KSWSJWKN

25°



74°



120°

