

System Addressing of DVM S Eco and CAC for Central Control Intergration


- System must be idle (no compressor operation) during system addressing
- System addressing must be done before tracking on central control devices to prevent duplicate addressing issues
- System Address can be set from "00" to "15"
- Must be done if connecting indoor units from separate systems to one wired controller.

Applicable Model Numbers:

AM0**FXMDCH/AA
AC0**JXADCH/AA
AC0**JXSCCH/AA
AC0**KXADCH/AA

System Addressing Procedure:

1. Press and hold "K2" for 3 seconds. "00 AU" will be displayed
2. Press "K2" until the desired address is shown on the right hand display.
3. Once the desired system address is displayed, press and hold "K2" to save the address.
4. System will reset, and re-track indoor units. The system will be in stand-by.

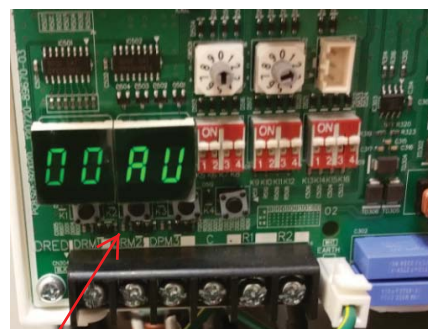

K2

Example - System Addressed as "01"

